

1



Remove old latch and hardware.

2



Peel template away from the backing paper.

3



Align vertical line on template with vertical seam on SmartPak case while aligning top of template with rim (lip) of case, and allpy template.

4




Drill two 5/32" holes (drill bit provided) at both target marks on template.

5



Remove template from case and place latch (opened) into position on front of case and align latch with new rivet holes.

6

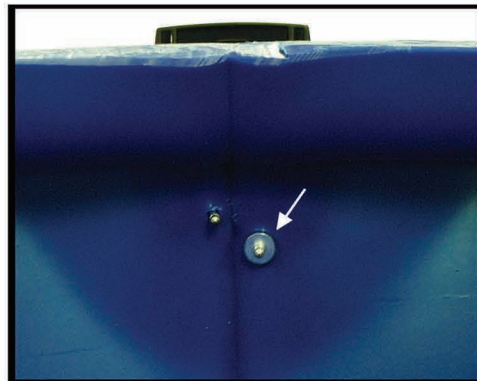

Insert rivets (provided) through latch holes and mount backup washers to exposed rivet shafts inside of case. Attach with rivet gun.